

**P.A. – S.p.A. – EQUIPAGGIAMENTI TECNICI DEL LAVAGGIO**

VIA MILANO, 13 – CASELLA POSTALE 115 – 42048 RUBIERA (REGGIO EMILIA) – ITALY  
 Tel. +39 0522 623611 – Fax. +39 0522 629600 – R.E.A. RE 156319 – R.I. RE11535 – Mecc. RE 013446  
 C.F. e P. IVA 01035950359 – Cap. Soc. i.v. € 750.000,00 – Codice Identificativo C.E.E. IT 01035950359  
 ART. 2497 – BIS C.C. DIREZIONE E COORDINAMENTO BENETTI srl R.I. TRIB. DI RE 01480690351  
 Web: <http://www.pa-etl.it> – E-mail: [info@pa-etl.it](mailto:info@pa-etl.it)

**VRP600 – Safety and pressure regulating valve Aisi 303****Technical manual: E 249**

Compensated pressure regulating valve.  
 Regulates the bypass of the fluid with a minimum variation of the pressure.  
 Suitable to be utilized as a safety valve on pressure washers.

**DN 15**

- **60.5400.00** VRP600 G1/2 560 bar – 56 MPa

- Sturdy construction in Sst Aisi 303
- Return action of the piston by means of a powerful spring, for a secure function and reliable pressure adjustment.
- Multiple connections for quick installation

**AS SAFETY VALVE ONLY FOR PRESSURE WASHERS**

- Reliable intervention discharging all the flow.
- Prompt and effective damping action against pressure spikes.

**AS A PRESSURE REGULATING VALVE**

- High balancing to guarantee slight variations of the rated pressure when the flow varies in bypass.
- Usable with a multiple number of lances.

**TECHNICAL SPECIFICATIONS**

Max.flow rate 80 l/min - Max. temperature 90°C (1)

Part number	Rated pressure bar - MPa	Permissible pressure bar - MPa	Minimum adjustable pressure bar - MPa	(2) Pressure increase as a VS – as a VRP bar – Mpa - bar - MPa	Inlet Outlet	Bypass	Weight g
60.5400.00	560 - 56	600 - 60	56 – 5.6	51 – 5.1 - 31 – 3.1	G 1/2" F	G 1/2" F	840

(1) The valve has been designed for a continuous use at a water temperature of 60°C. It can resist for short periods at a maximum temperature of 90°C.

(2) **Pressure increase** = is the increase of pressure needed into the valve for discharging the max. flow when utilized at rated pressure

**Instruction manual, maintenance, installation, spare parts.**


For a correct utilization, follow the directions of this manual

**Re-print them on the use and maintenance booklet of the machine.**

n. 12.9249.00

Rev. 01  
01/09/03

## DIMENSIONAL DRAWING.

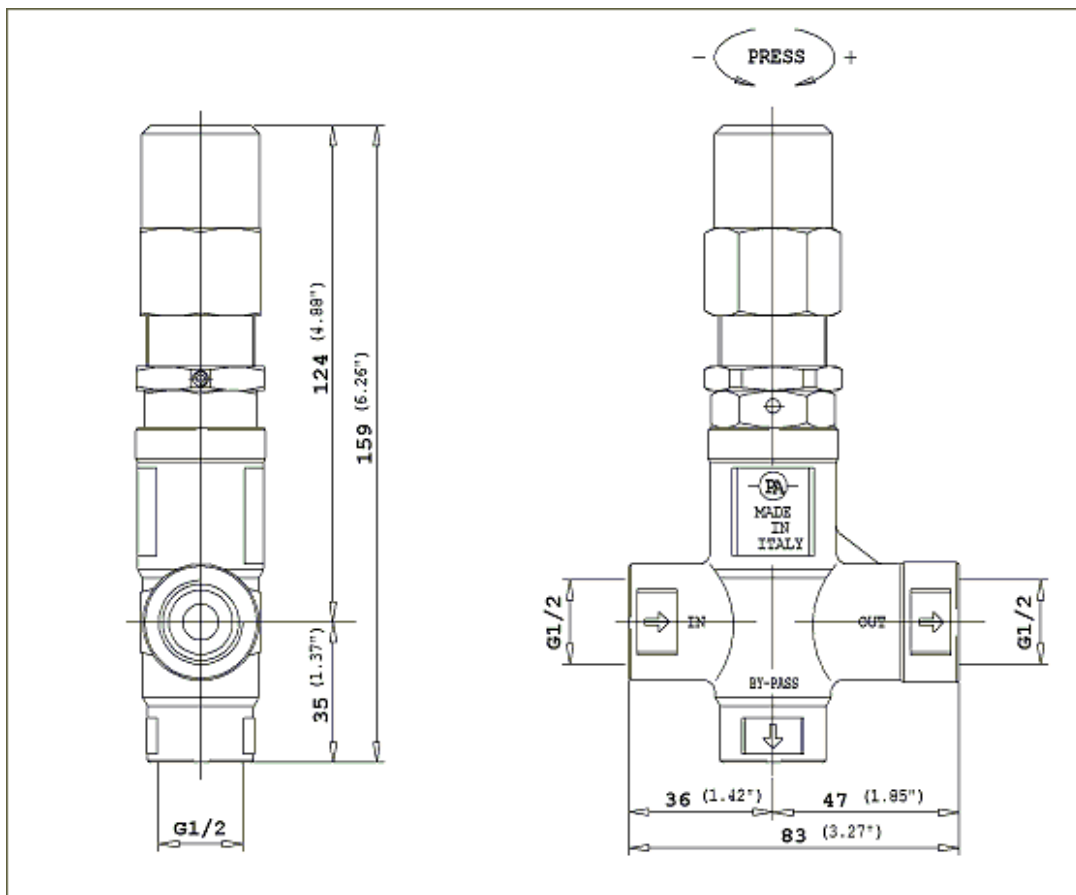

## INSTRUCTIONS

### SELECTION

This product is to be utilized with clean fresh water, even slightly additivated with normal detergents. For use involving different or corrosive liquids, contact the PA Technical department. Choose the valve in line with the data of nominal running (system rated pressure, max flow and max temperature). In any case, the pressure of the machine should not exceed the permissible pressure rate imprinted on the valve. When in use as pressure regulator, adopt a nozzle that allows a bypass of at least 5% of the total flow, bearing in mind that a worn out nozzle causes pressure loss. The valve, assembled in line with these indications, avoids pressure spikes whilst the machine is in operation.

### INSTALLATION

This accessory, on a system that produces hot water, must be fitted **in front of the heat generator**.

As a **SAFETY VALVE**: in the case when frequently combined with unloader valves and low pressure in the pump, it has to be fitted in the section that remains pressurized when the gun is shut off.

As a **PRESSURE REGULATOR**: maintains the pressure in the system steady during flow changes. **Always** install with the correct specifications when combined with a safety valve. In case of discharge in the tank or directly into the pump, it is necessary to provide devices capable to prevent damaging turbulence to the liquid flow.

### OPERATIONS

The discharge should be returned to a baffled tank. If, on the contrary, the pump is fed directly from the water mains, it is advisable to install a pressure reducing valve, before the pump, to avoid dangerous pressure spikes which could badly damage manifolds and suction valves. In case of extended conditions of bypass directed to the suction side of the pump, it is recommended to install a thermal valve (VT3 or VT6) to avoid dangerous water temperature build-up.

### PRESSURE ADJUSTMENT/SETTING

As a **SAFETY VALVE**: the adjustment has to be made in such a way that the pressure setting is not superior to the system working pressure and its accessories; this prevents the arisal of numerous pressure increases in hot water systems and static pressure (gun shut off).

As a **PRESSURE REGULATOR**: adjust the valve when the system is pressurized and the gun open. The operation will be easy and smooth if the proper nozzle is chosen. When rotating the adjustment knob, it has to correspond to a consequent pressure increase; should the pressure stop increasing before reaching the desired value, **do not insist**, but check the correct nozzle size in relation to flow and pressure. On reaching the desired pressure, tighten the nut (pos 22) with a drop of paint in order to emphasize any tampering or slackness.

## PROBLEMS AND SOLUTIONS

PROBLEMS	PROBABLE CAUSES	SOLUTIONS
Valve cycles	<ul style="list-style-type: none"> <li>- Air inside the system</li> <li>- Worn out seals</li> <li>- Clogged circuit</li> </ul>	<ul style="list-style-type: none"> <li>- Flush out</li> <li>- Replace</li> <li>- Clean or widen passages</li> </ul>
The valve does not reach pressure	<ul style="list-style-type: none"> <li>- Incorrect nozzle size</li> <li>- Seat/shutter/ball worn out</li> <li>- Damaged nozzle</li> <li>- Impurities</li> </ul>	<ul style="list-style-type: none"> <li>- Modify</li> <li>- Replace</li> <li>- Replace</li> <li>- Clean</li> </ul>
Pressure drop	<ul style="list-style-type: none"> <li>- Worn out nozzle</li> <li>- Pump gaskets worn out</li> <li>- Valve seat worn out</li> <li>- Air inside the system</li> </ul>	<ul style="list-style-type: none"> <li>- Replace</li> <li>- Replace</li> <li>- Replace</li> <li>- Flush out</li> </ul>
Pressure spikes	<ul style="list-style-type: none"> <li>- There is not a min.5% of total flow in bypass</li> <li>- Clogged nozzle</li> <li>- Adjustment with squashed spring</li> </ul>	<ul style="list-style-type: none"> <li>- Re-adjust</li> <li>- Clean</li> <li>- Repeat adjustment and replace nozzle</li> </ul>
Water leakage from bypass Valve pounding	<ul style="list-style-type: none"> <li>- O-ring seat damaged</li> <li>- Damaged seat</li> <li>- Impurities or worn out valve pumps</li> </ul>	<ul style="list-style-type: none"> <li>- Replace</li> <li>- Replace</li> <li>- Clean</li> </ul>

## REGULATIONS : *see norm manual*

The accessory hereby described bears the CE marking in accordance with the Norms and Directives applied on the Declaration of conformity.

For a correct utilization, follow the directions described in this manual and re-print them on the Use and maintenance manual of the machine.

Make sure that you are given the **Original Conformity Declaration** for the accessory chosen. The present manual is valid for all unloader valves named **VRP 600**.

## MAINTENANCE

Maintenance has to be carried out by **Specialized Technicians**.

**STANDARD:** every 400 working hours (circa 10,000 cycles), check and lubricate the seals with water resistant grease.

**SPECIAL:** every 800 working hours( circa 20,000 cycles), control the wear of the seals and internal parts and if necessary, replace with original PA parts taking care during installation and to lubricate with water resistant grease.


**ATTENTION:** reassemble the valve in the correct manner paying special attention how to set the valve as described in the paragraph **PRESSURE ADJUSTMENT/SETTING**.

The manufacturer is not to be considered responsible for damage as a result from incorrect fitting and maintenance.

Technical data, descriptions and illustrations are indicative and liable to modification without notice.

60.1530.00 VS24 Ai303 safety valv. 1/2F Bsp  
60.1535.00 VS43 Ai303 safety valv. 1/2F Bsp

60.5400.00 VRP 600 reg.val. Ai303 1/2F Bsp

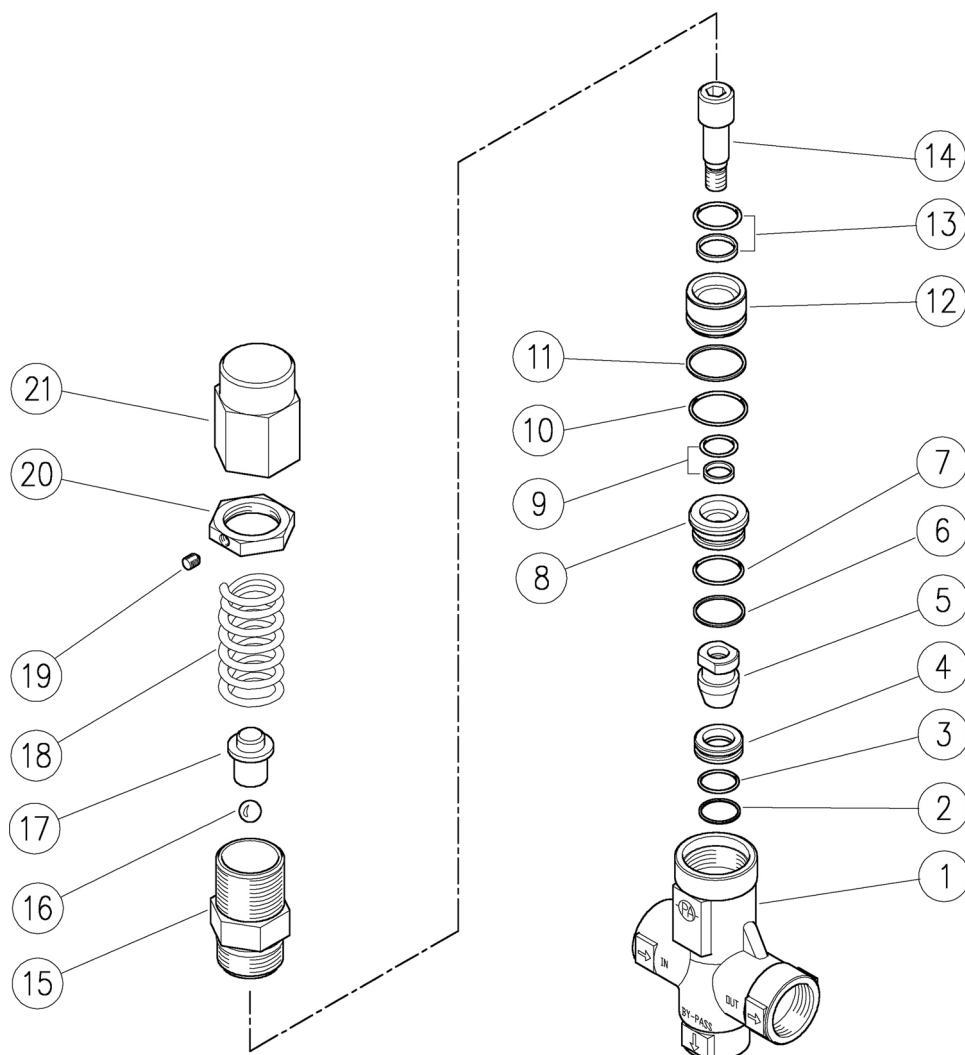

Pos.	P/N	Description	Q.ty	K1	K2	K3	K4	
1	60.5401.55	Sst. housing -VS23-VRP/P600, 1/2F Bsp	1					1
2	10.4036.17	Back-up ring, 14x2x17x1,5 mm	1	•				10
3	10.3064.01	O-ring, 1,78x14 mm Ni 85	1	•				10
4	60.5404.51	Seat, 9,2x17x7,5 mm Sst.	1	•				5
5	60.5403.51	Shutter pin, M7 Sst.	1	•				3
6	10.4039.00	Back-up ring, 15,7x18,5x1,5 mm	1	•				10
7	10.3066.01	O-ring, 1,78x15,6 mm Ni 85	1	•				10
8	60.5410.51	Lower spacer ring, 8x21,4x11,5 mm Sst.	1					3
9	10.2008.00	Stem seal, 8x13x2,2 mm +O-ring	1	•				5
10	10.3070.02	O-ring, 1,78x18,77 mm Ni 85	1	•				10
11	10.4057.00	Back-up ring, 18,7x21,5x1,5 mm	1	•				10
12	60.5409.51	Upper spacer ring, 8,3x21,5x17 mm Sst.	1					3
13	10.2013.00	Stem seal, 12x17x2,2 mm +O-ring	1	•				5

Pos.	P/N	Description	Q.ty	K1	K2	K3	K4	
14	60.5408.51	Piston, M7 Sst.	1					5
15	60.5407.51	Piston holder, Sst.	1					5
16	14.7443.10	Ball, 11/32" Sst.	1					10
17	60.5406.31	Spring rest pin, brass	1					3
18	60.5402.61	Spring, 5,4x22x64,5 mm z.pl.	1					3
18	60.1407.61	Spring, 5x21,4x49 mm z.pl. (1)	1					25
18	60.0975.61	Spring, 4,2x19,7x42 mm z.pl. (2)	1					10
19	16.2100.00	Set screw, DIN914 M4x4 mm	1					10
20	60.1814.31	Ring nut, M27x1 brass	1					5
21	60.5405.31	Valve regulating ring nut, M27x1 brass	1					3
21	60.1408.31	Valve regulating knob, M27 brass (1)	1					5
21	60.1727.31	Valve regulating knob, brass (2)	1					5

Kit	P/N	Description	
K1	60.5411.24	Spares kit -VRP/P 600, 10x1pcs.	1

(1) 60.1535.00 (2) 60.1530.00